


WINCTRL

T2 THROTTLE BASE II


User Manual V1.1 2023.11

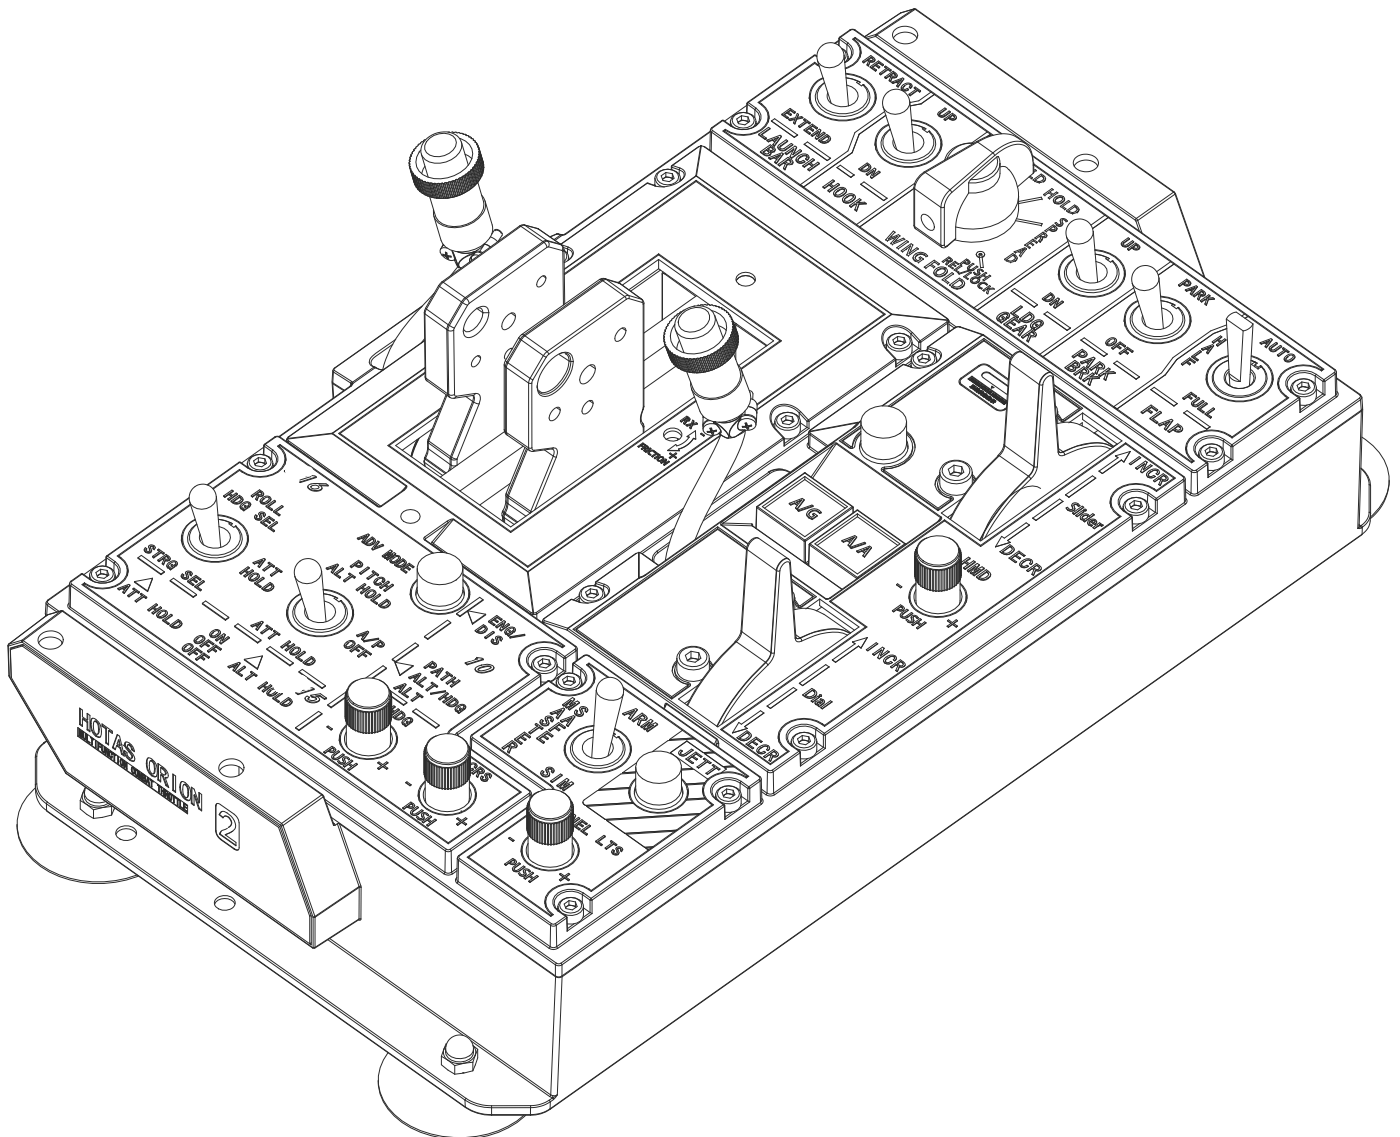

Catalogue:

1. Parameter	4
1.1. Performance parameter	4
1.2. Applicable mode	5
1.3. Dimensions	5
1.4. Installation dimensions	5
2. Function	6
2.1. Key/switch arrangement and functions	6
2.2. Adjustment method	7
3. Components disassemble and assemble	8
4. Installation method	9
4.1. T2-2base and suction cups installation	9
4.2. Cable clamp installation	10
4.3. Other installations	11


Packing list

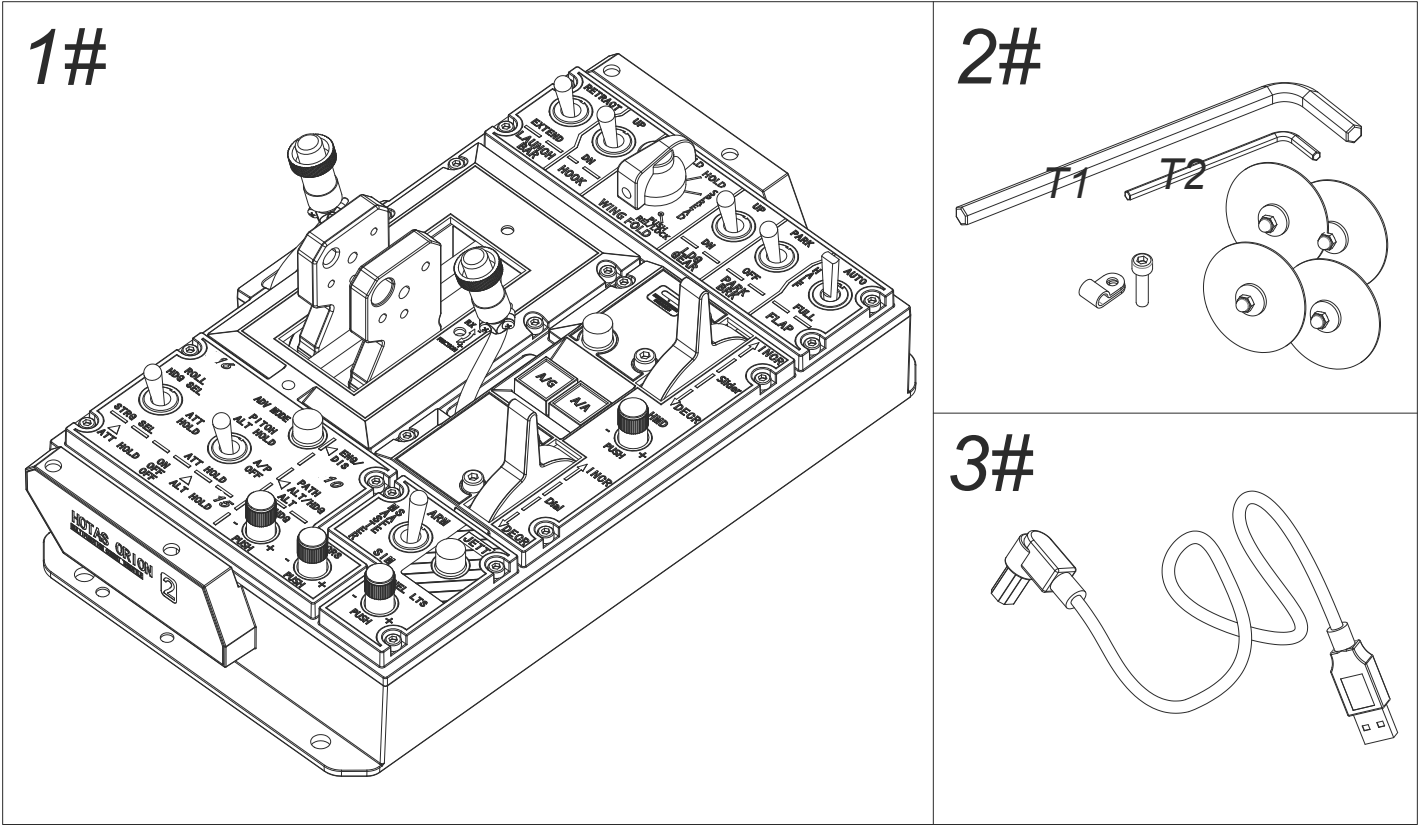


①	T2-BASE II (1#)	1
②	Accessory kit (2#)	1
③	USB cable (3#)	1

1. Parameter

1.1. Performance parameter

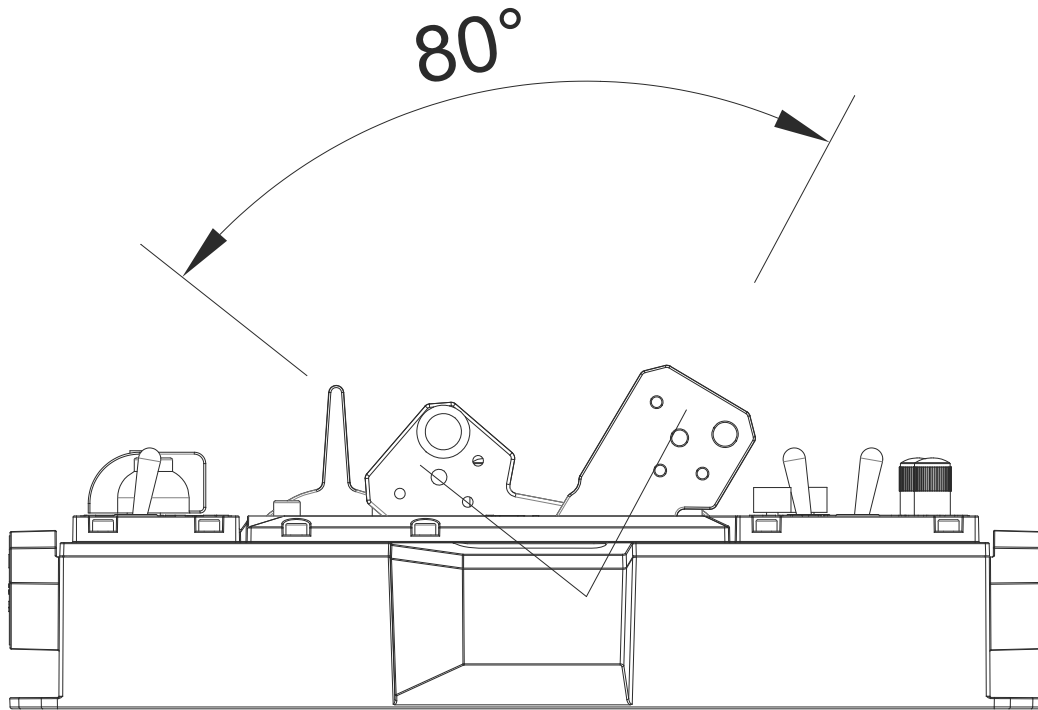

Core unit total travel: 80° ;

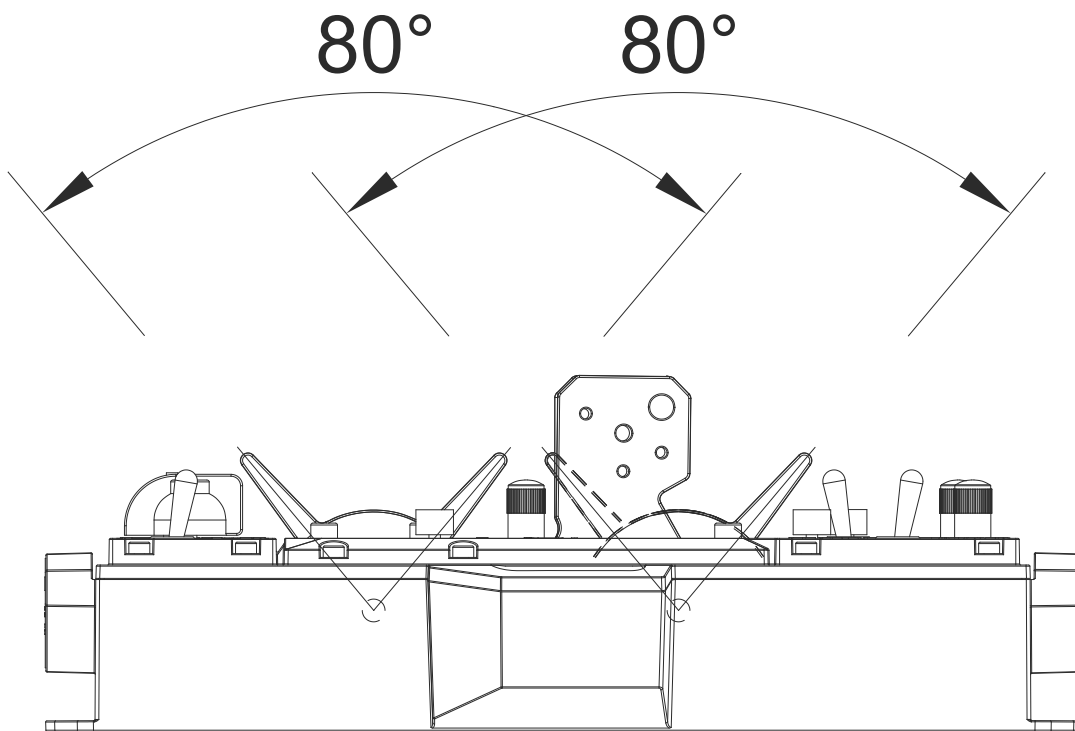


Thumb wheel switch total travel: 80° ;

1.2. Applicable mode

Throttle grips as TGRIP-18/TGRIP-18, etc are all applicable

1.3. Dimensions

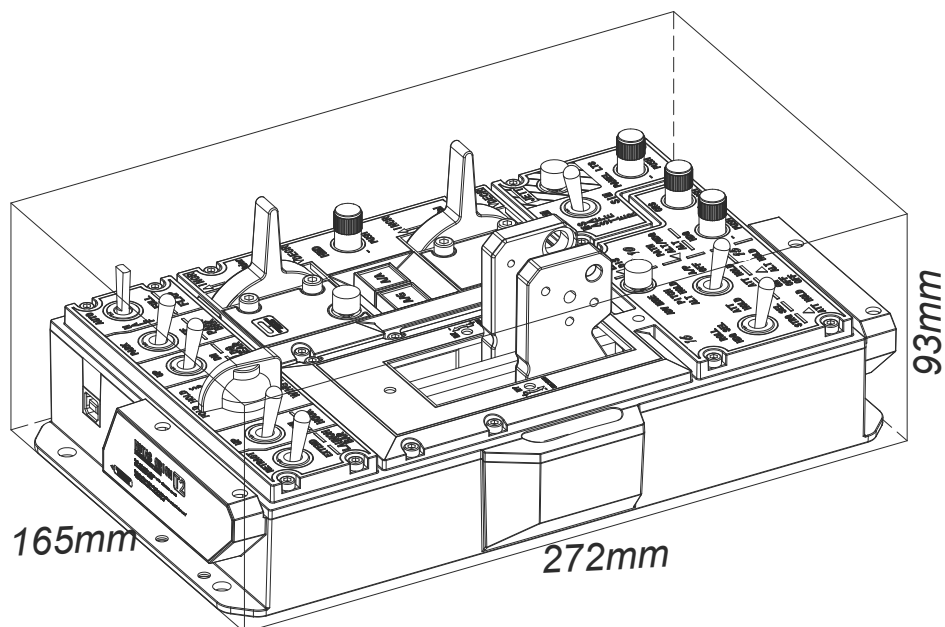


Length*width*height

272mm*165mm*93mm;


Mass: 1.5Kg=3.32lb


1.4. Installation dimensions

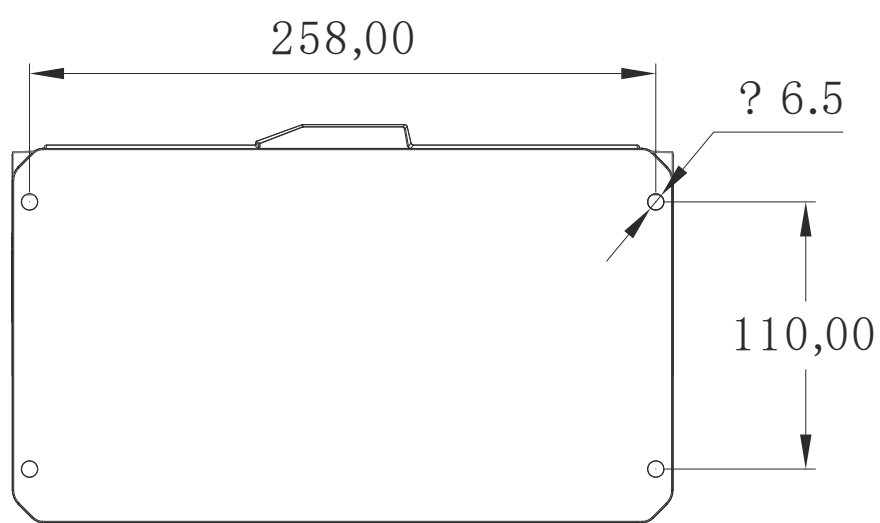

2. Function

2.1. Key/switch arrangement and functions

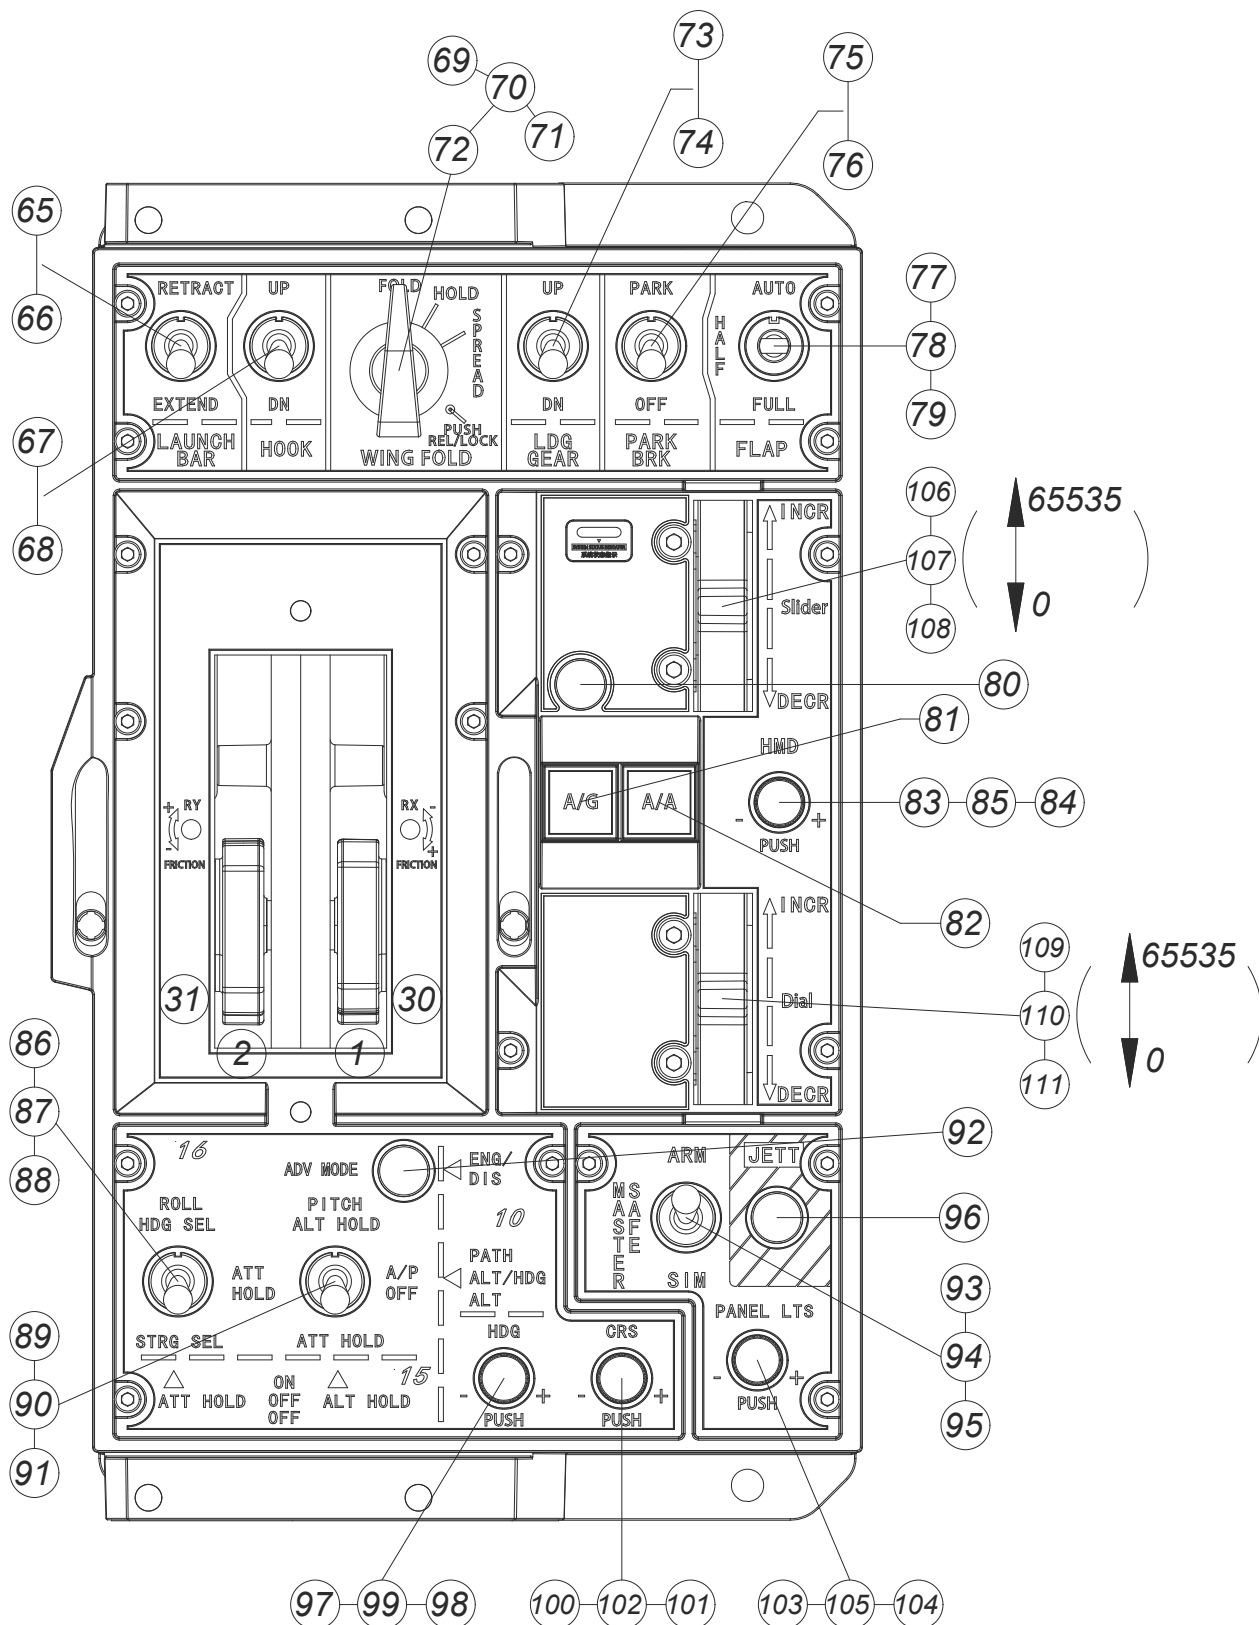

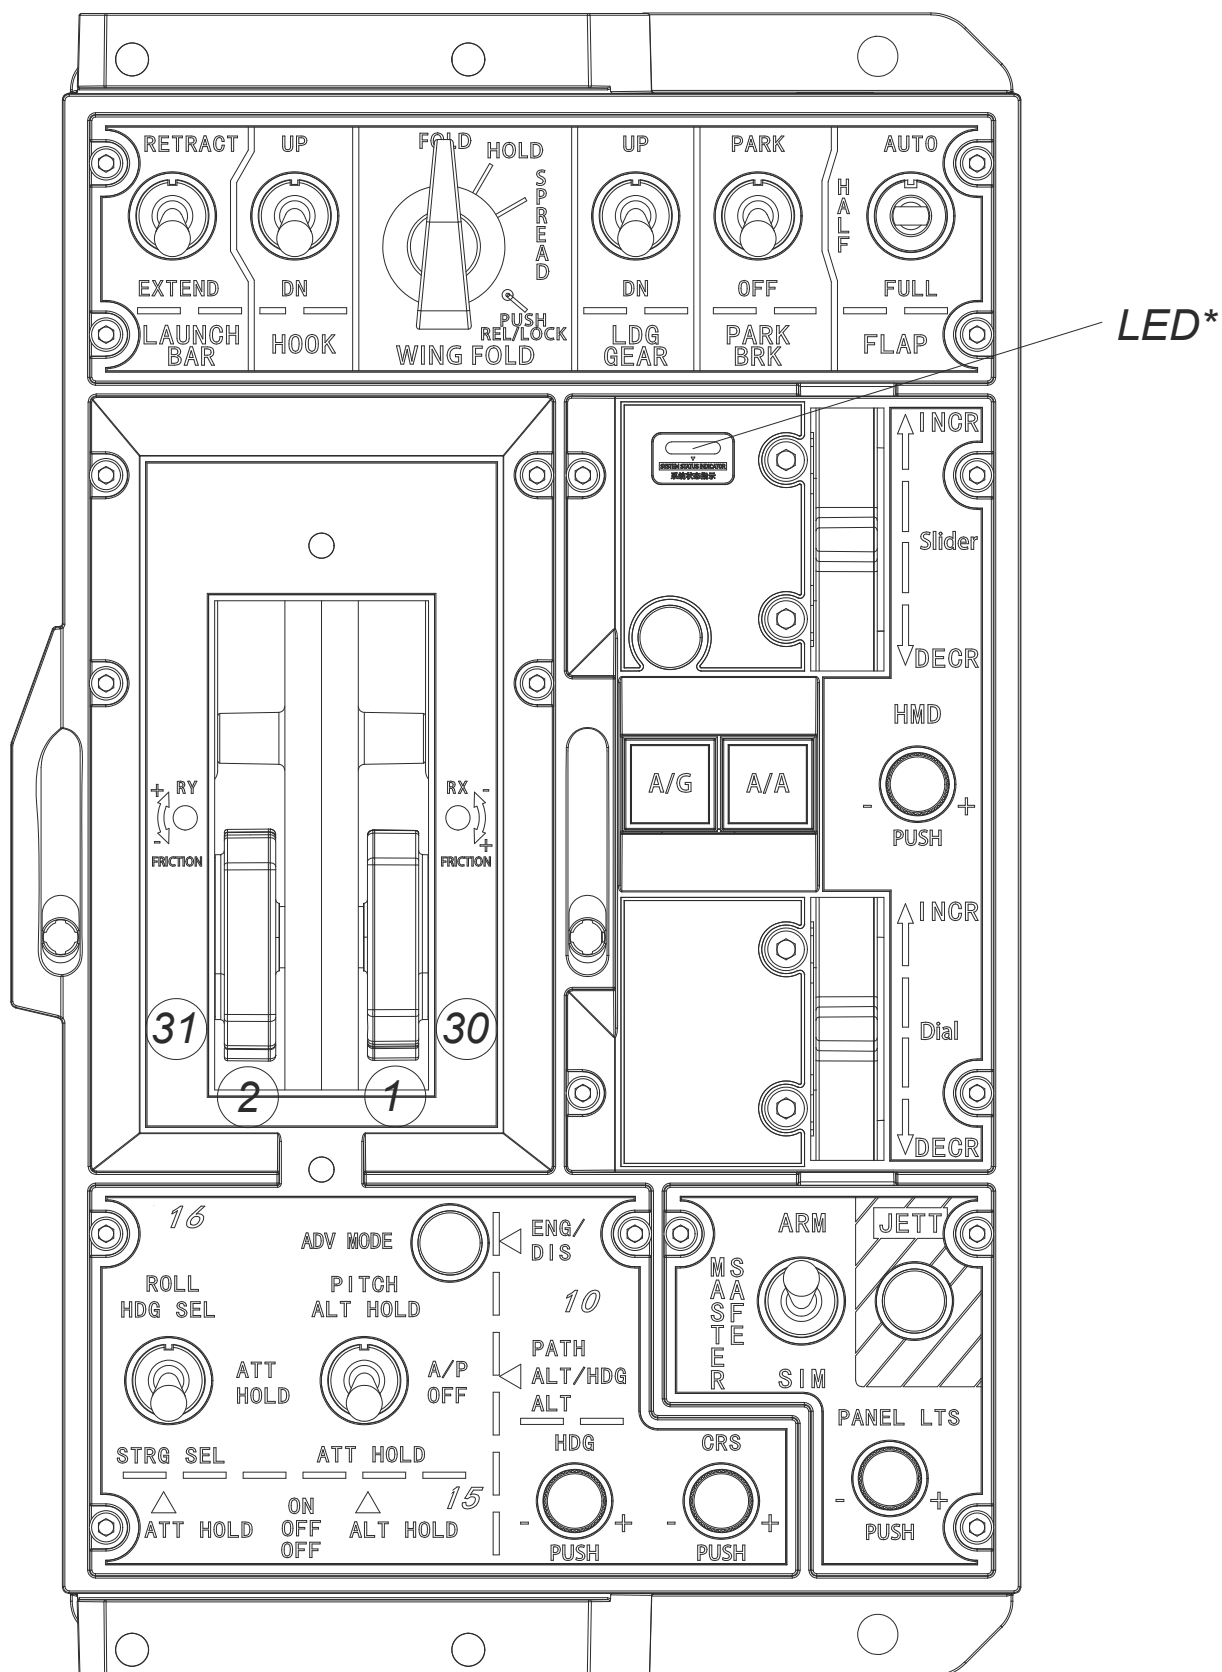


***LED Status Display:**

Steady slow flashing in green (1s interval) – BOOT mode.

Slow flashing in green (1s interval) for 5 times, then steady ON – Operational mode.

Slow flashing in green (1s interval) for 5 times, then OFF – Power supply only mode.

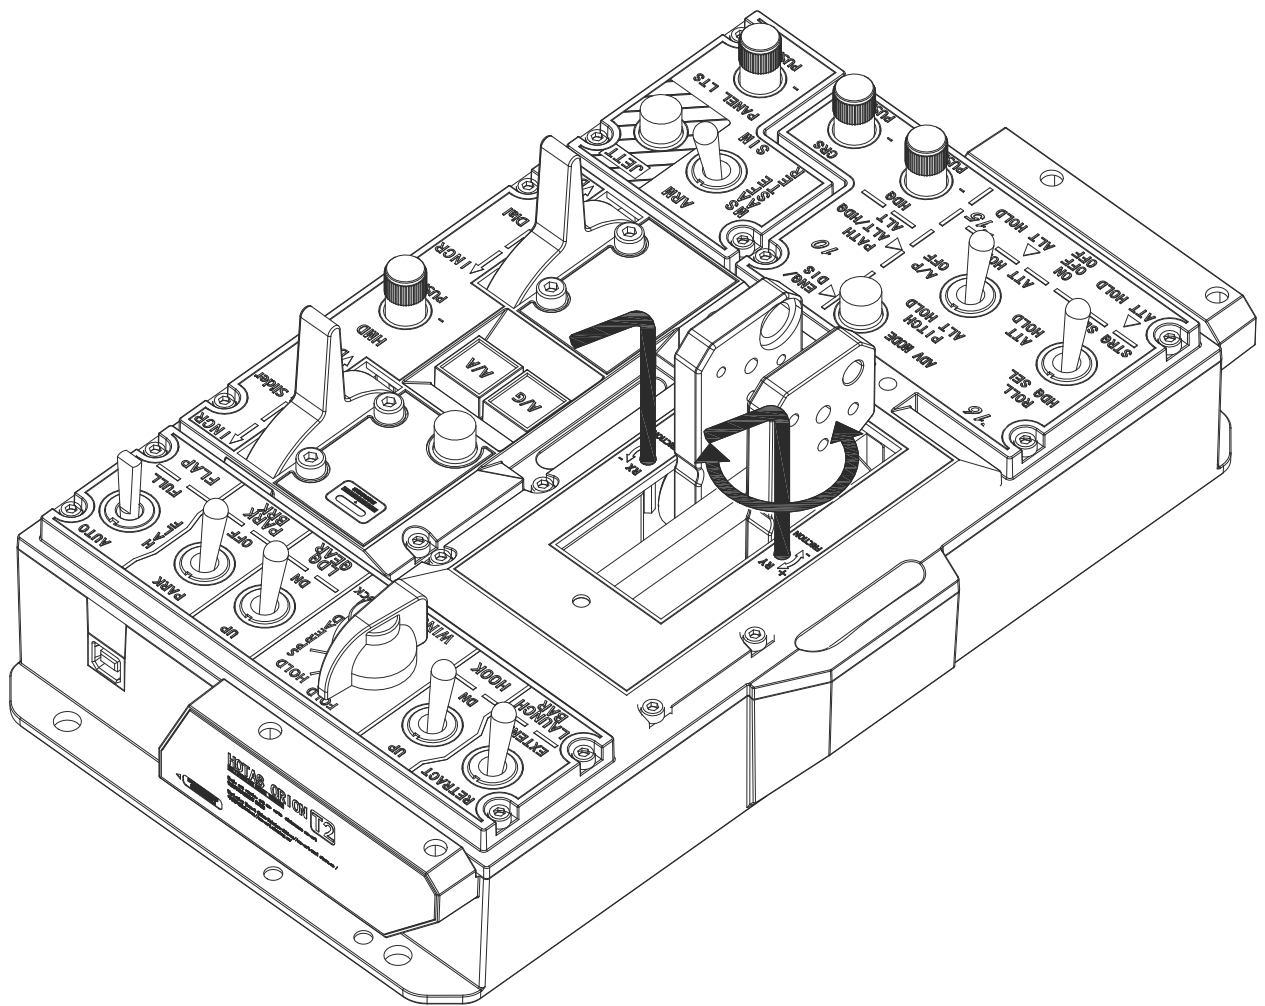


Put the Allen wrench (T2) in the designated hole and adjust the friction by rotating the screws. (rotate clockwise to increase the friction, anticlockwise, decrease.)

3. Components disassemble and assemble


/

4. Installation method

4.1. T2-2base and suction cups installation

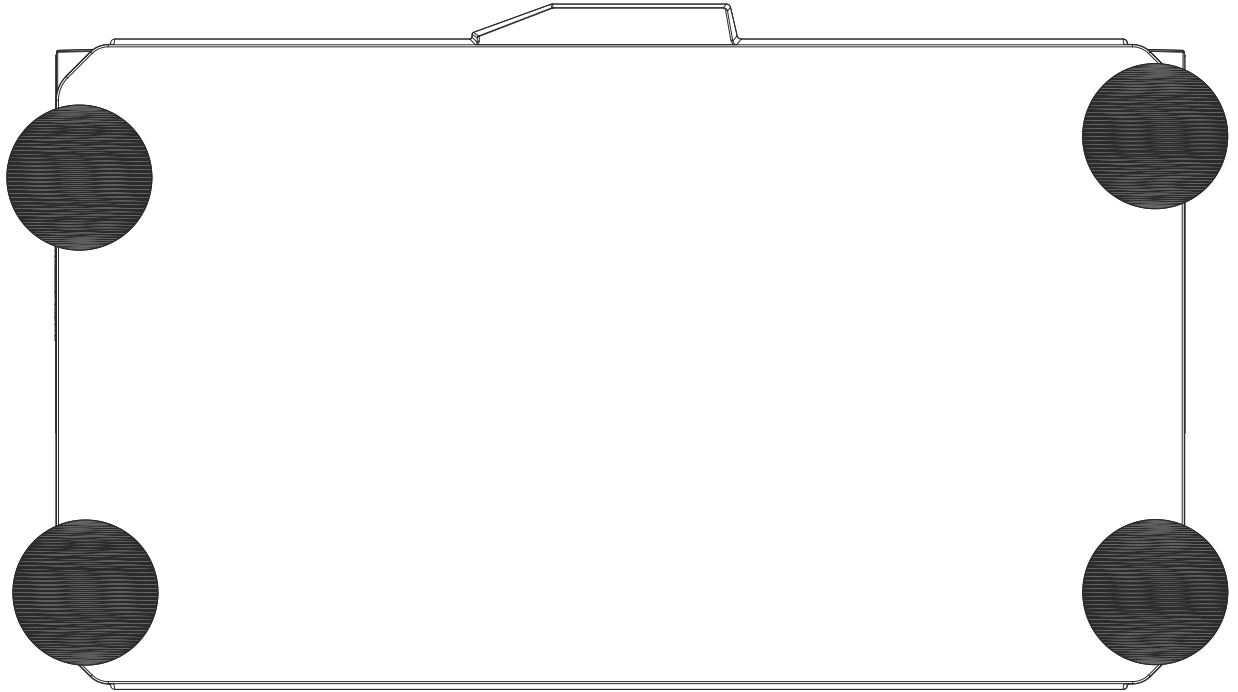

Remove the suction cup screws and put the bolts through the base, finally screw the bolts on.
Note: clean the suction cup and table surface so as to ensure the base stick tightly and firmly.

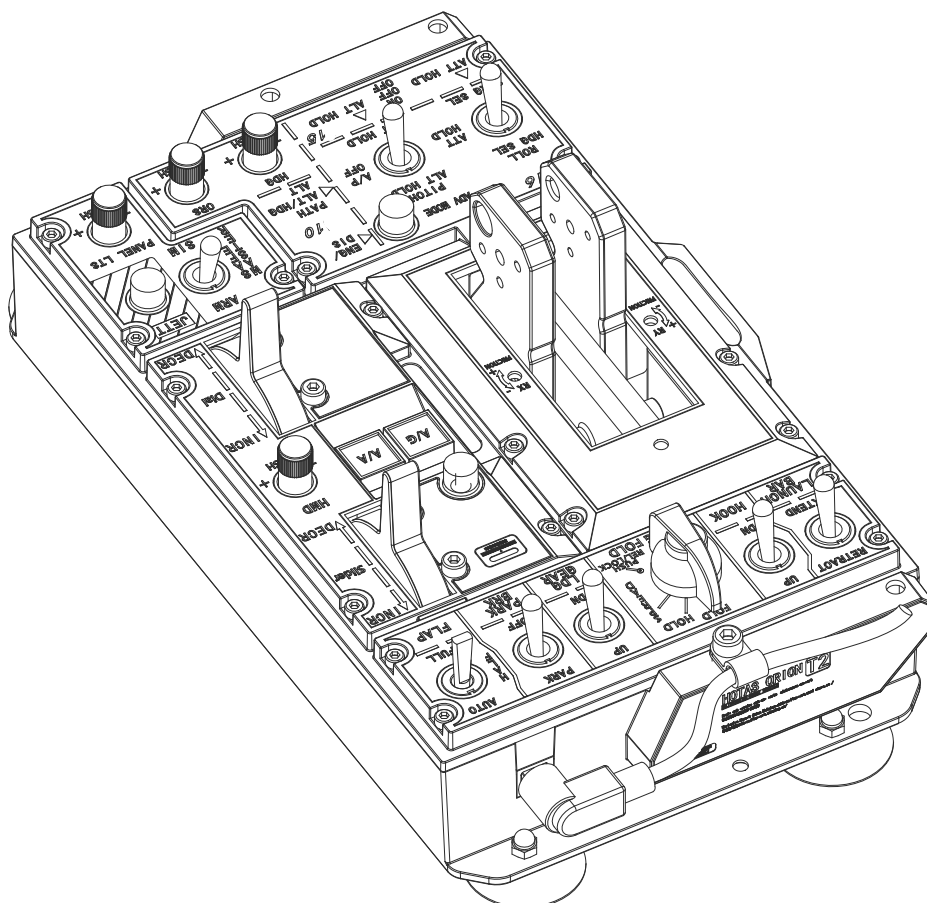

(T1)

4.3. Other installations

/

WINCTRL